



Z1 Push Trolley
Instruction Manual

REGISTER ONLINE

www.motocaddy.com/warranty

Locating your Serial Number

Locating your Serial Number

The serial number for the Motocaddy Z1 push trolley is located inside the accessory compartment on the handle.

This number is required when registering your warranty online and should be kept handy for future use.

The same number should also be on the box received with your trolley. Please ensure you keep hold of the packaging in case you need to return your trolley for any reason. A proof of purchase must also be kept in case your trolley requires servicing during its warranty period.

Please keep a record of your trolley serial number here for future reference

M	C	Z	1									
---	---	---	---	--	--	--	--	--	--	--	--	--

Attaching the Wheels

The Motocaddy Z1 has no definitive left or right wheel. To attach the rear wheels, slide the release button down (fig. 1) and slide the wheel axle into the housing.



Fig 1

Adjusting the Front Wheel Alignment

In the unlikely event that your trolley is not tracking in a straight line, the alignment of the front wheel can be adjusted to rectify the fault. This problem can be caused by a number of factors including a slightly loose bag support or an unevenly packed golf bag. Should you wish to alter the alignment of the front wheel you will require a Phillips screwdriver to follow these simple steps:

1. There are two screws on either side of the housing that are used to realign the wheel (fig. 2)
2. If your trolley is veering to the right, turn the left screw counter clockwise and the right screw clockwise
3. If your trolley is veering to the left, turn the right screw counter clockwise and the left screw clockwise

This procedure can be carried out until you are happy the trolley is moving in a straight line (please note you may only need to adjust one screw at a time).



Fig 2

NB : These instructions are based on positioning yourself in front of the trolley looking at the wheel.

Unfolding your Trolley

Unfolding your Trolley

1. Starting with your trolley standing up (fig. 1)
2. Hold and lift the handle so that the trolley starts unfolding (fig. 2)
3. With your other hand, hold the locking section up the frame towards the handle. (fig.2 inset)
4. Once the handle is fully up, push the locking section down over the frame to secure (fig. 3)
5. Holding the upper bag support in one hand, push the front wheel away from the main frame to unfold (fig. 4)
6. Once the front wheel is fully unfolded, secure in place using the latch underneath (fig. 4 inset)



Fig 1

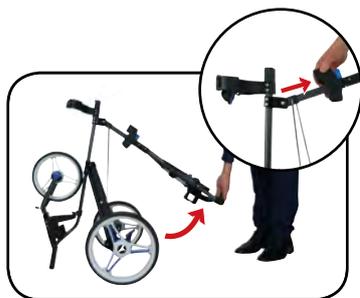


Fig 2



Fig 3



Fig 4

Adjusting the Handle Height

To adjust the handle height, lift and release the handle height adjustment latch (fig. 1) and move the handle into the desired position. Resecure the handle height adjustment latch once you have selected the required handle height.

Folding your Trolley

1. Release front wheel latch underneath trolley (fig. 2 inset)
2. Fold the wheel up towards the frame until it clicks in to place (fig. 2)
3. Whilst holding on to the handle, lift the locking section up to release the upper frame (fig. 3)
4. Push the handle down to start the trolley folding (fig. 4) until it slots between the rear wheels

NB : Holding on to the upper bag support with your other hand will steady the trolley and ease folding



Fig 1

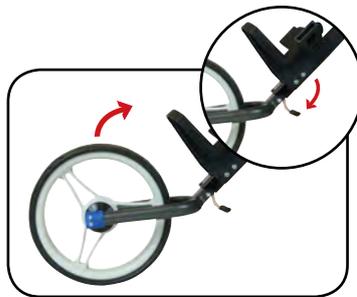


Fig 2



Fig 3



Fig 4

Using the Upper and Lower Bag Supports

Using the Upper Bag Supports

The upper bag support straps are secured using the following steps:

1. Stretch the elasticated strap around the bag and loop the rounded bar underneath the hook (fig. 1)
2. Position the two placement straps centrally on your golf bag (fig. 2)



Fig 1

Using the Lower Bag Supports

This Motocaddy trolley is fitted with the EASILOCK™ bag attachment system.

If you are using an EASILOCK™ compatible golf bag please follow these simple instructions:

1. Remove the two pre-fitted lower bag straps by depressing the rear button and sliding (fig. 3)
2. Match up the indicating line on the golf bag with the line on the lower bag support
3. Lower the bag until the pins lock in position. You should hear a small click



Fig 2

If you are using a non-EASILOCK™ golf bag, please use the following instructions:

1. Stretch the elasticated strap around the bag and loop the rounded bar underneath the hook
2. Position the two placement straps centrally on the base of your golf bag



Fig 3

Please ensure all straps are hooked in place securely before releasing. Failure to do so could result in injury to the user.

Adjusting the Bag Supports

The bag support straps are manufactured from elasticated material to allow your golf bag to be held tightly in place.

The strap should be adjusted to be reasonably tight around the golf bag:

1. Unclip the elasticated straps from the housing by pulling outwards in the direction shown (fig. 1)
2. Move the bar as required to tighten or loosen the strap fitting. Pulling the bar downwards will tighten, pushing it upwards will loosen (fig. 2)
3. Ensure that the straps are clipped back into the housing before use

Using the Parking Brake

To apply or release the foot brake press down on the pedal (fig. 3).

The foot brake is designed to be used as a parking brake (like a hand brake of a car or foot brake on a pram). When applying the brake, please ensure that the trolley has completely stopped moving.

WARNING: Attempting to apply the brake whilst the trolley is still in motion may cause damage to the trolley and could invalidate the warranty.

Always ensure that the parking brake has been disengaged before attempting to set off again.



Fig 1



Fig 2



Fig 3



Motocaddy Ltd, Units 15 - 18 Stansted Distribution Centre,
Start Hill, Great Hallingbury, Hertfordshire, CM22 7DG, United Kingdom

t: +44 (0)1279 712 370 e: info@motocaddy.com w: www.motocaddy.com



We are dedicated to protecting the environment and encourage the recycling of Motocaddy products through a free collection and disposal service. To find out more or to locate your nearest Motocaddy recycling point, please contact us through our website.

MC.19.54.001

EASILOCK™ Patent (GB) - GB2519073